

1/23

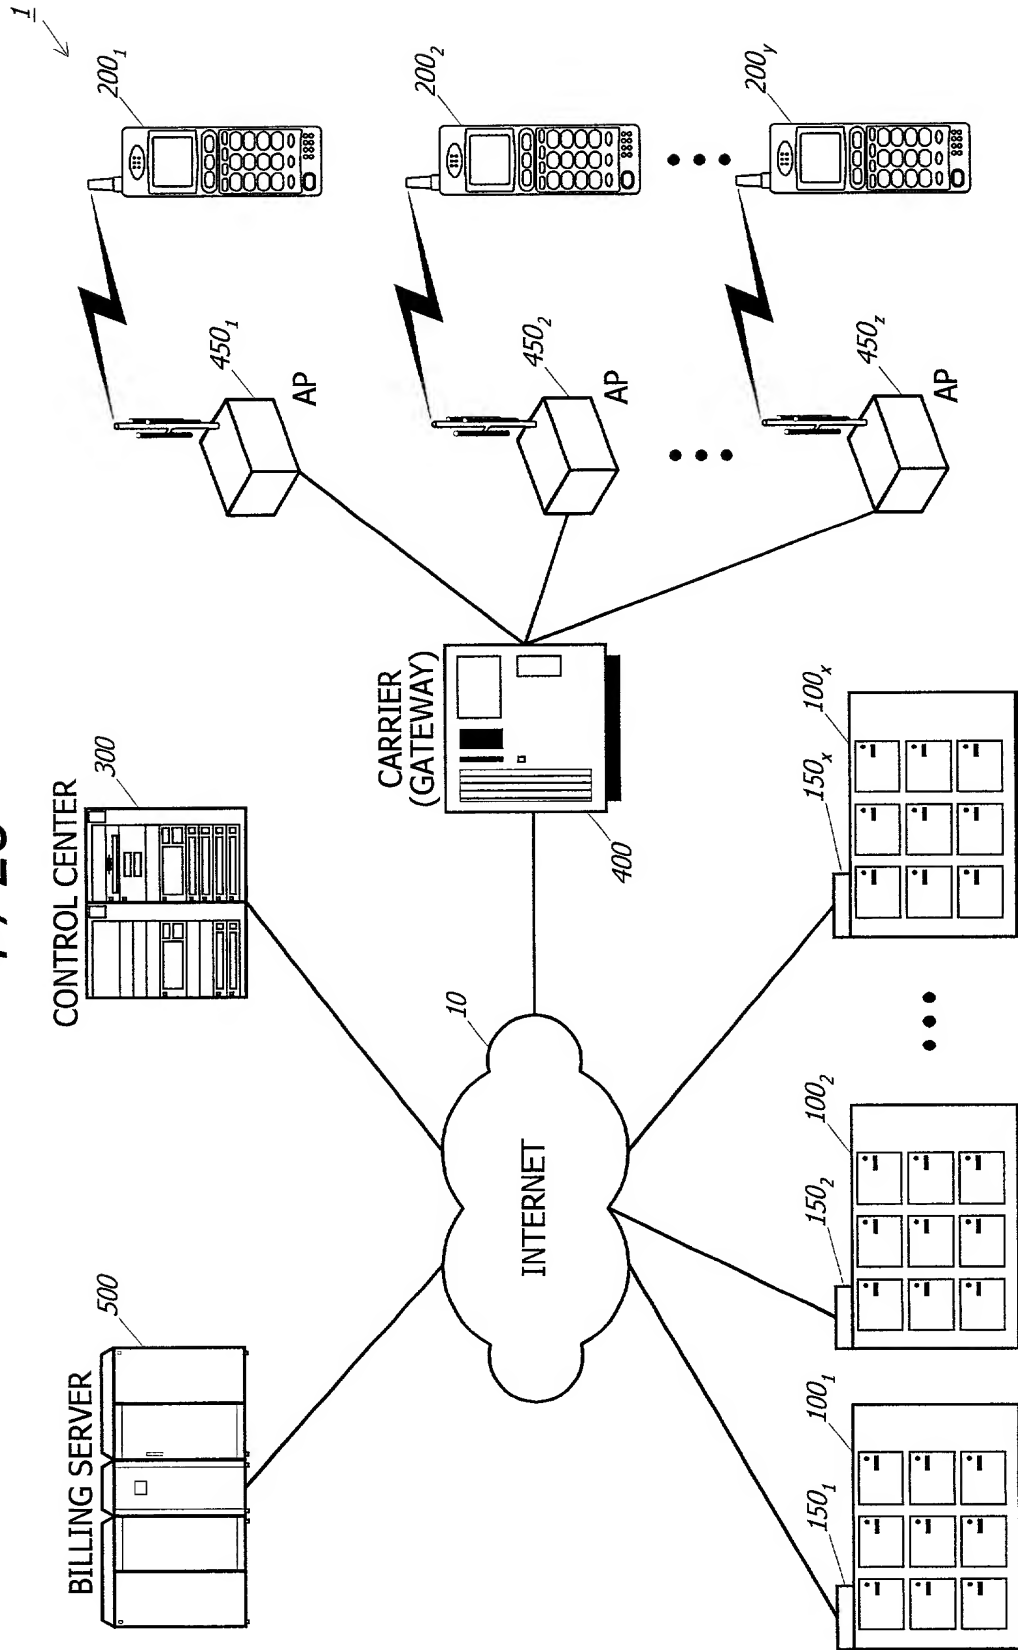 


FIG. 1

2 / 23

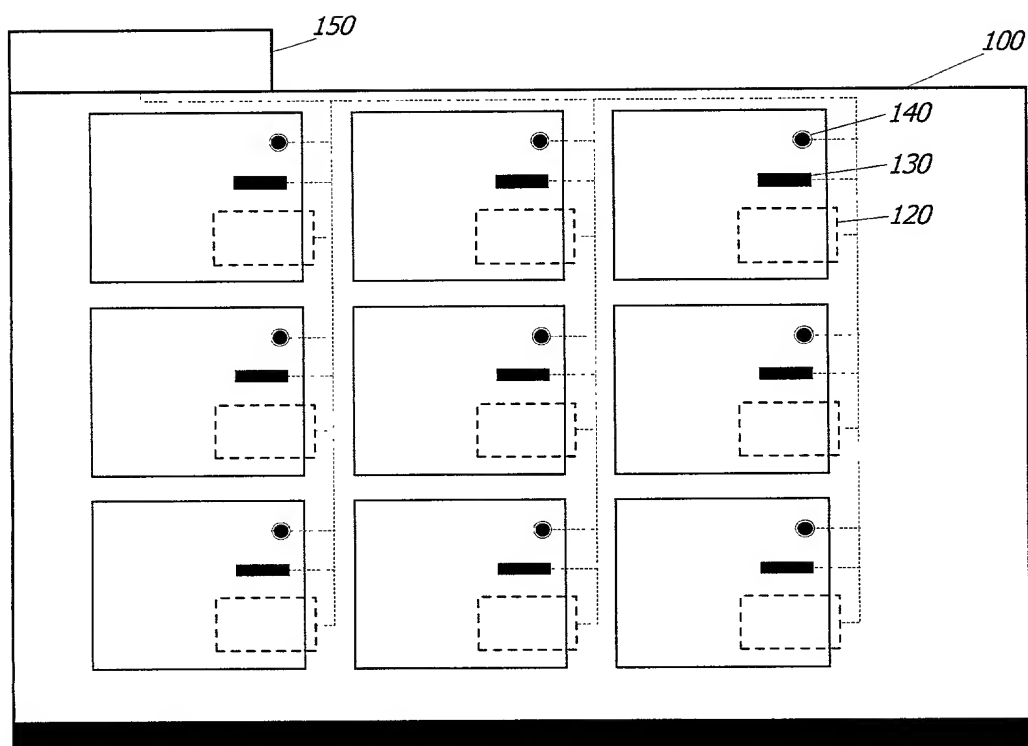 


FIG. 2

3 / 23

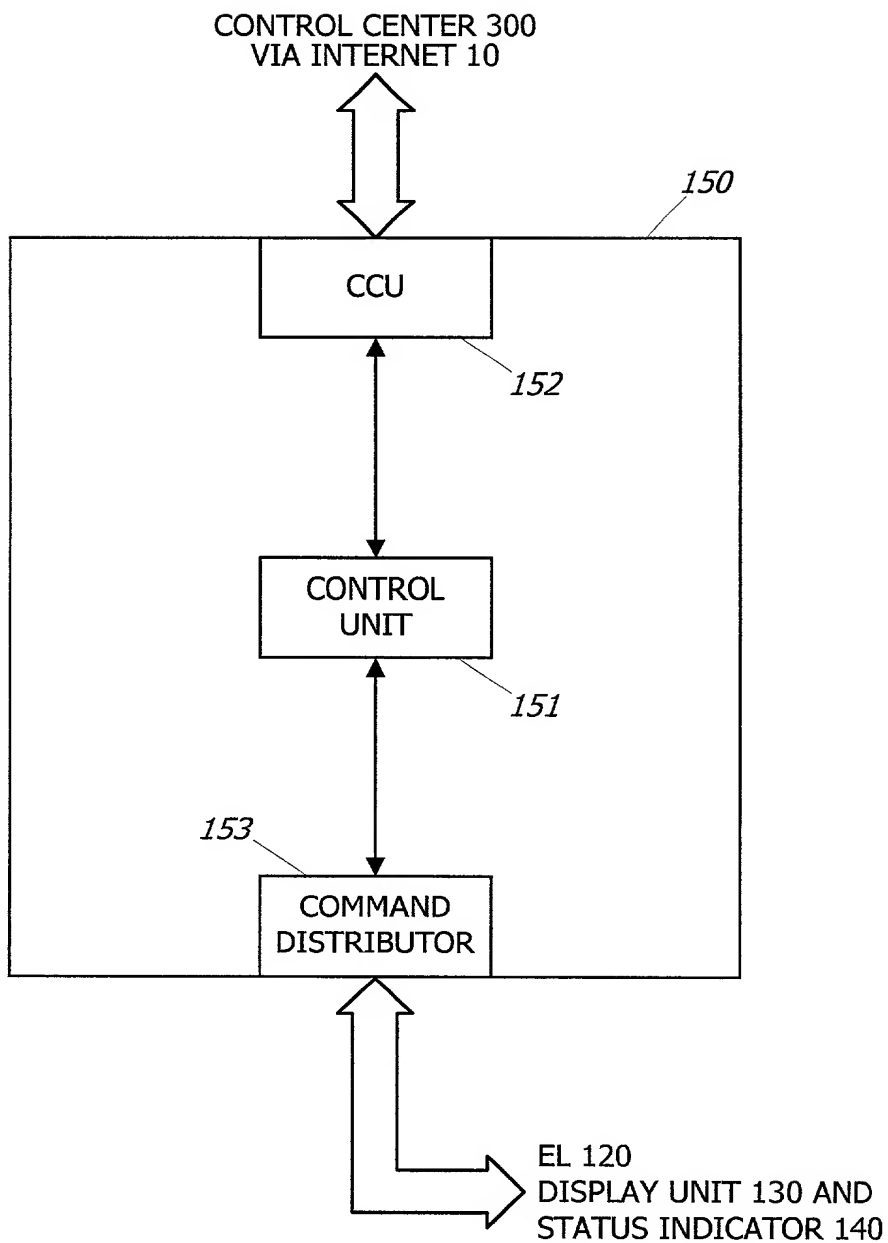 


FIG. 3

4 / 23

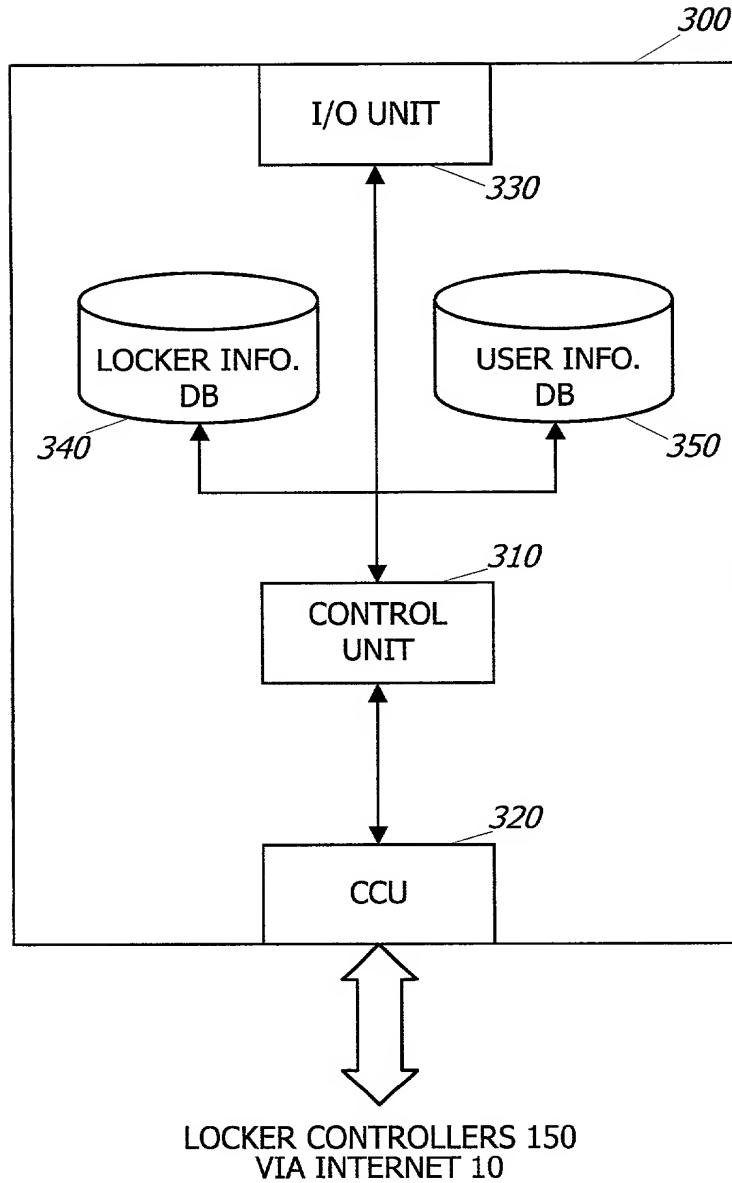 


FIG. 4

5/23

LOCKER INFORMATION DATABASE 340

AREA	LOCKER NO.	BOX NO.	FEE/h	STATUS		START TIME	OTP	USER ID	ADDITIONAL INFO.
				RES.	OCCU.				
TOKYO 001	A001	01	\$1.99-	YES	NO	---	*****	ABC001	map001_a001.gif
		02		---	YES	NOV.26 20:50	*****	EFG002	
		∴	∴	∴	∴	∴	∴	∴	
		24	\$2.50-	NO	NO	---	---	---	
	∴	∴	∴	∴	∴	∴	∴	∴	∴
		01	\$1.85-	---	YES	NOV. 26 14:15	*****	XYZ999	
	Z999	02		NO	NO	---	---	---	map001_z999.gif
		∴		∴	∴	∴	∴	∴	
		15		NO	NO	---	---	---	
	∴	∴	∴	∴	∴	∴	∴	∴	∴

FIG. 5

USER INFORMATION DATABASE 350

USER ID	LOGIN PASSWORD	USER ATTRIBUTE DATA	PAYMENT
ABC001	*****	Yoshihiro INOMATA ***, Minato-ku, Tokyo 03-****-1234	CREDIT CARD
:	:	:	:

FIG. 6

7 / 23

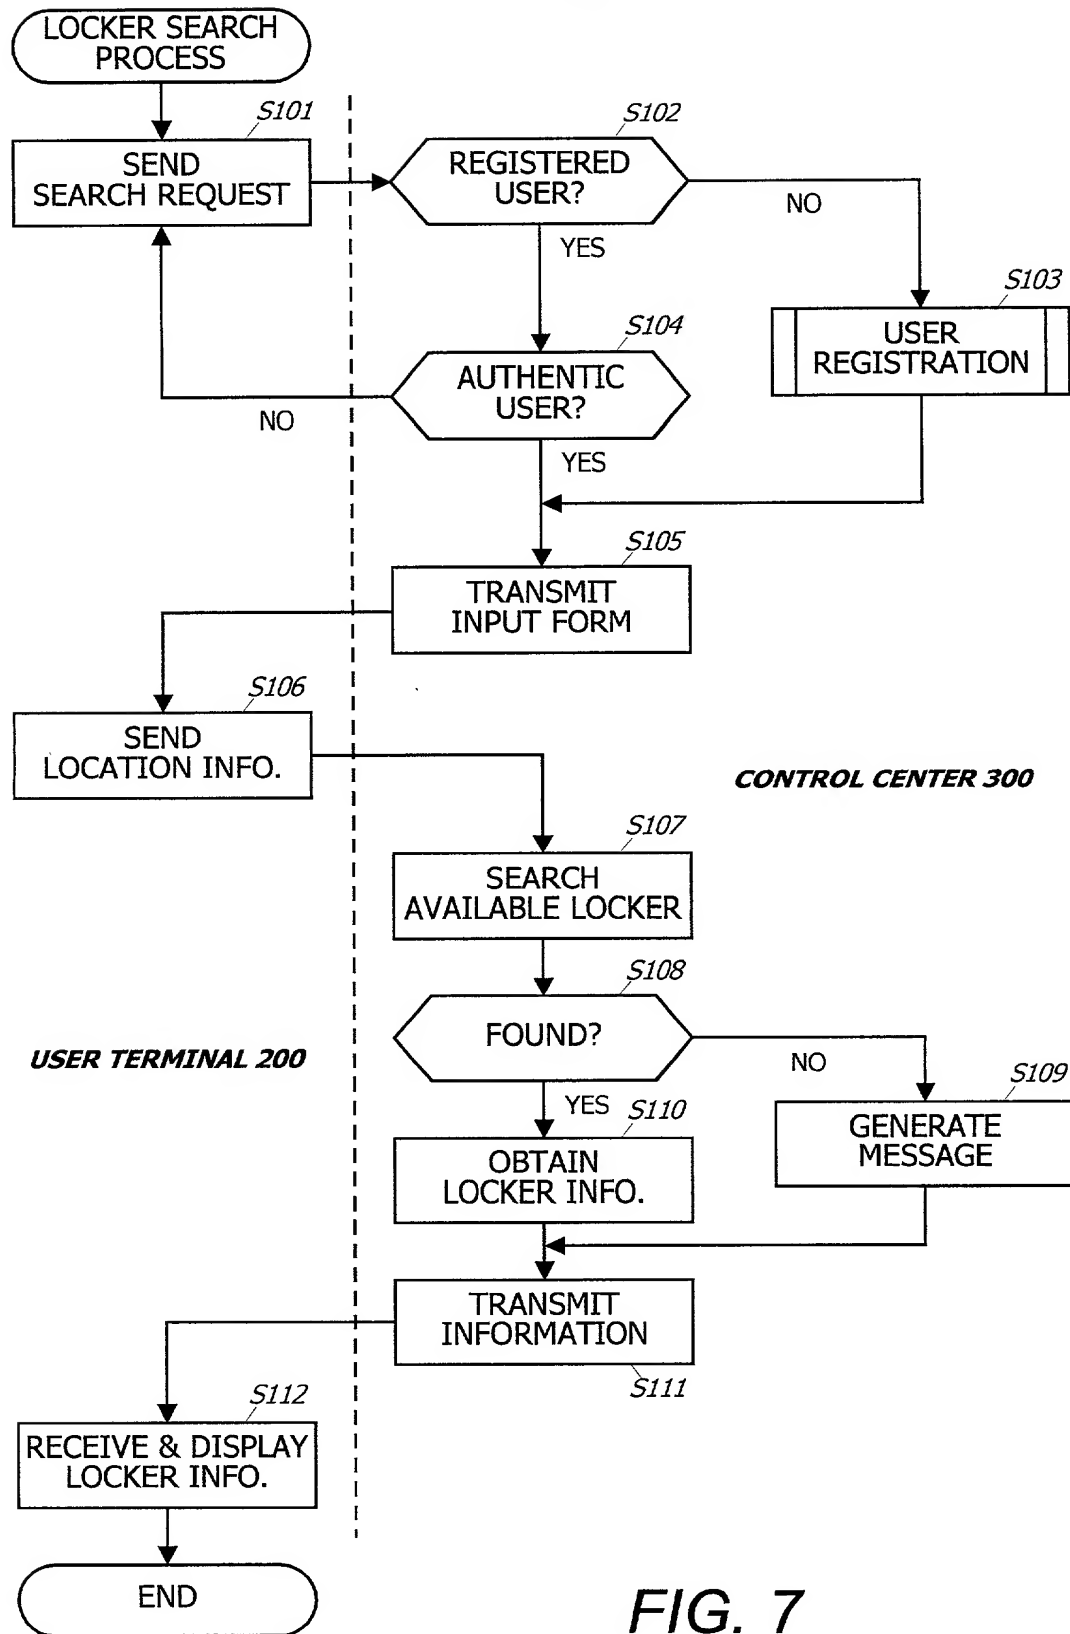 


FIG. 7

8 / 23

FIG. 8A

FIG. 8A is a screen display showing a menu. At the top left is a signal strength icon, and at the top right is a battery level icon. The word "MENU" is centered at the top. Below it is a list of four options: "1.Search Locker", "2.Unlock the Locker", "3.Re-Lock the Locker", and "4.Terminate Service". The first option, "1.Search Locker", is highlighted with a black background. At the bottom, there are three elements: the word "Back" on the left, a four-way directional pad in the center, and the word "Jump" on the right.

FIG. 8B

FIG. 8B is a screen display showing a message and a list of options. At the top left is a signal strength icon, and at the top right is a battery level icon. The text "Our service requires user registration." is centered. Below it is a list of two options: "1.User Registration (for Unregistered Users)" and "2.Go to Service (for Registerd Users)". The first option is highlighted with a black background. At the bottom, there are three elements: the word "Back" on the left, a four-way directional pad in the center, and the word "Jump" on the right.

FIG. 8C

FIG. 8C is a screen display for user login. At the top left is a signal strength icon, and at the top right is a battery level icon. The text "User ID" is above a solid rectangular input field. Below that, the text "Login Password" is above a dashed rectangular input field. Under the password field are two buttons: "Edit" and "Send", each enclosed in a dashed box. At the bottom, there are three elements: the word "Back" on the left, a four-way directional pad in the center, and the word "Jump" on the right.



9 / 23

Input desired location

Edit

Send

Back ◀▶⬆⬇▶⬆ Jump

FIG. 9A

Sorry.  
There is no available  
locker in that area.

Try to find it in another  
area?

Yes

No

Back ◀▶⬆⬇▶⬆ Jump

FIG. 9B

10023807 122104

10 / 23

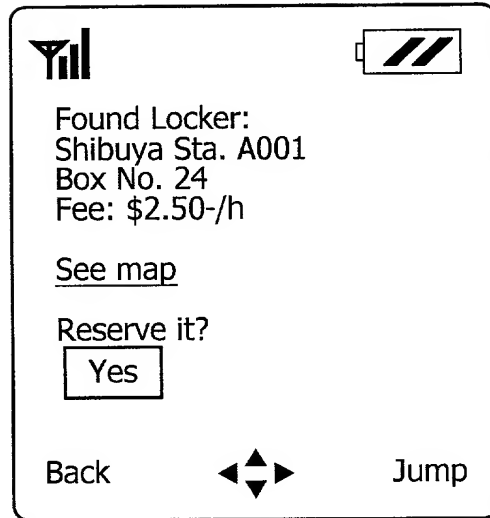 


FIG. 10A

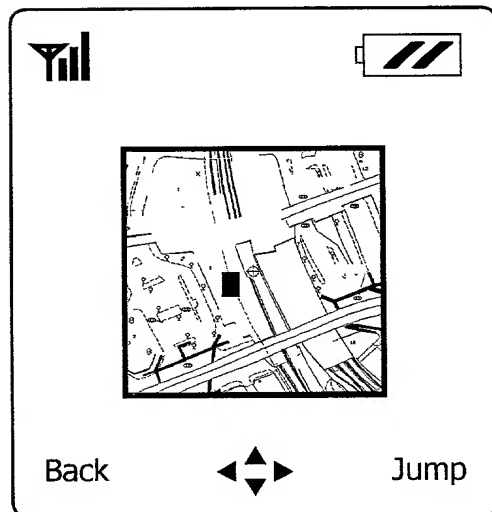 


FIG. 10B

11 / 23

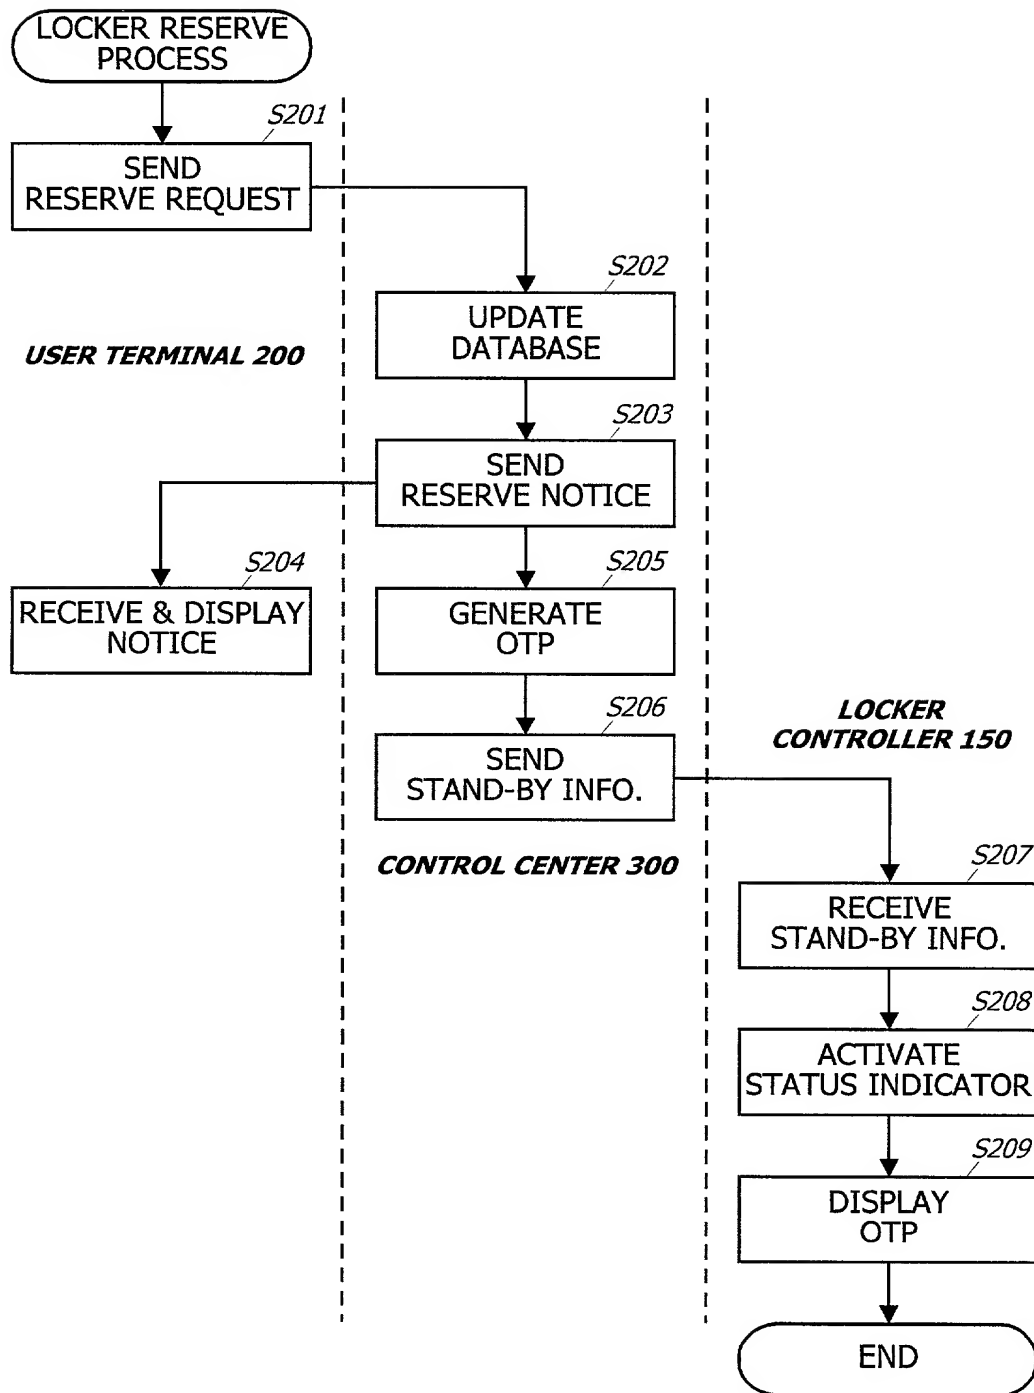 


FIG. 11

12 / 23

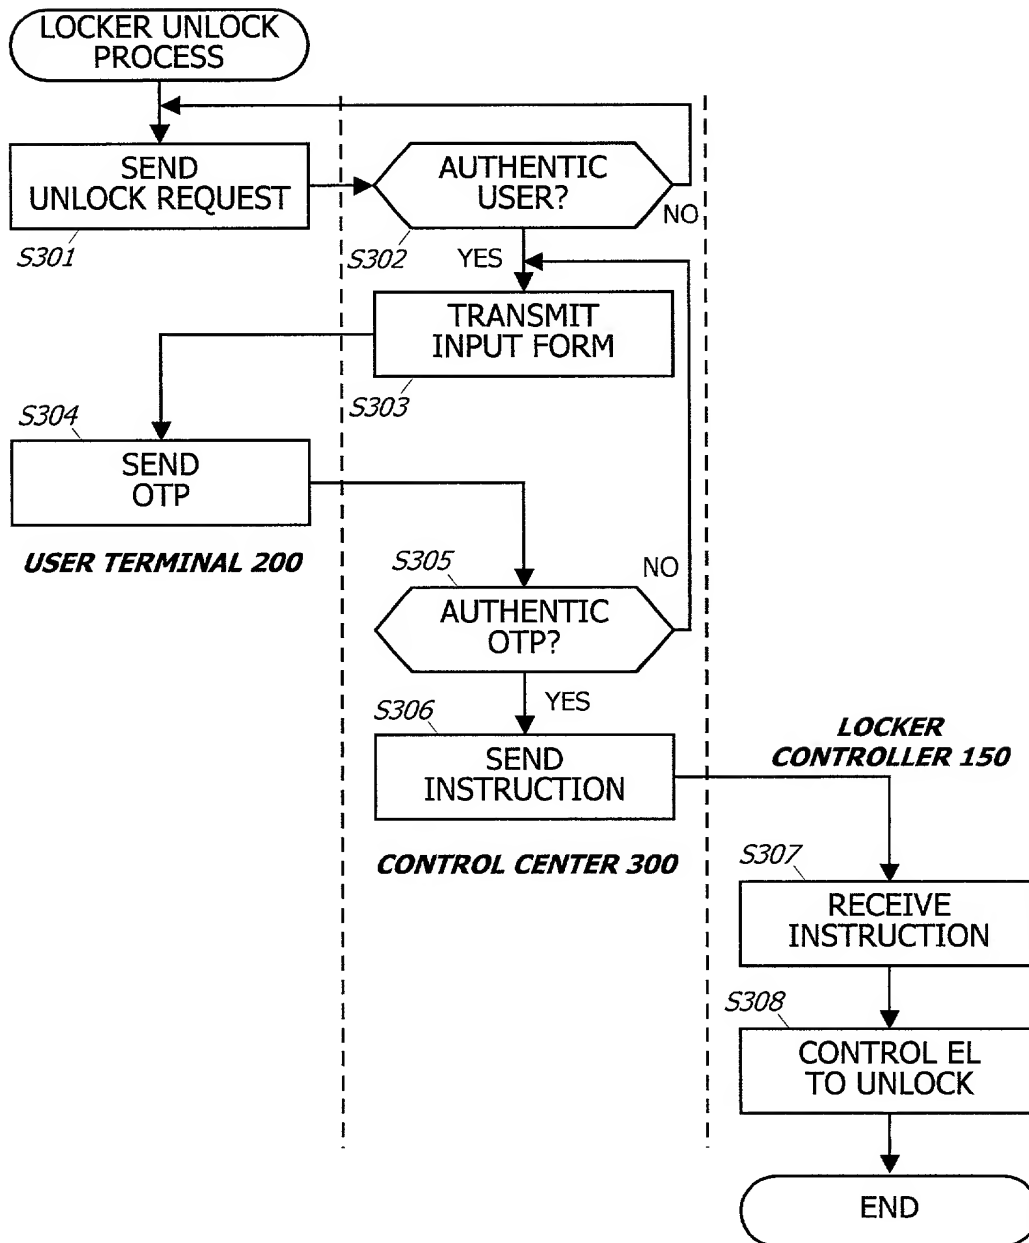 


FIG. 12

13 / 23

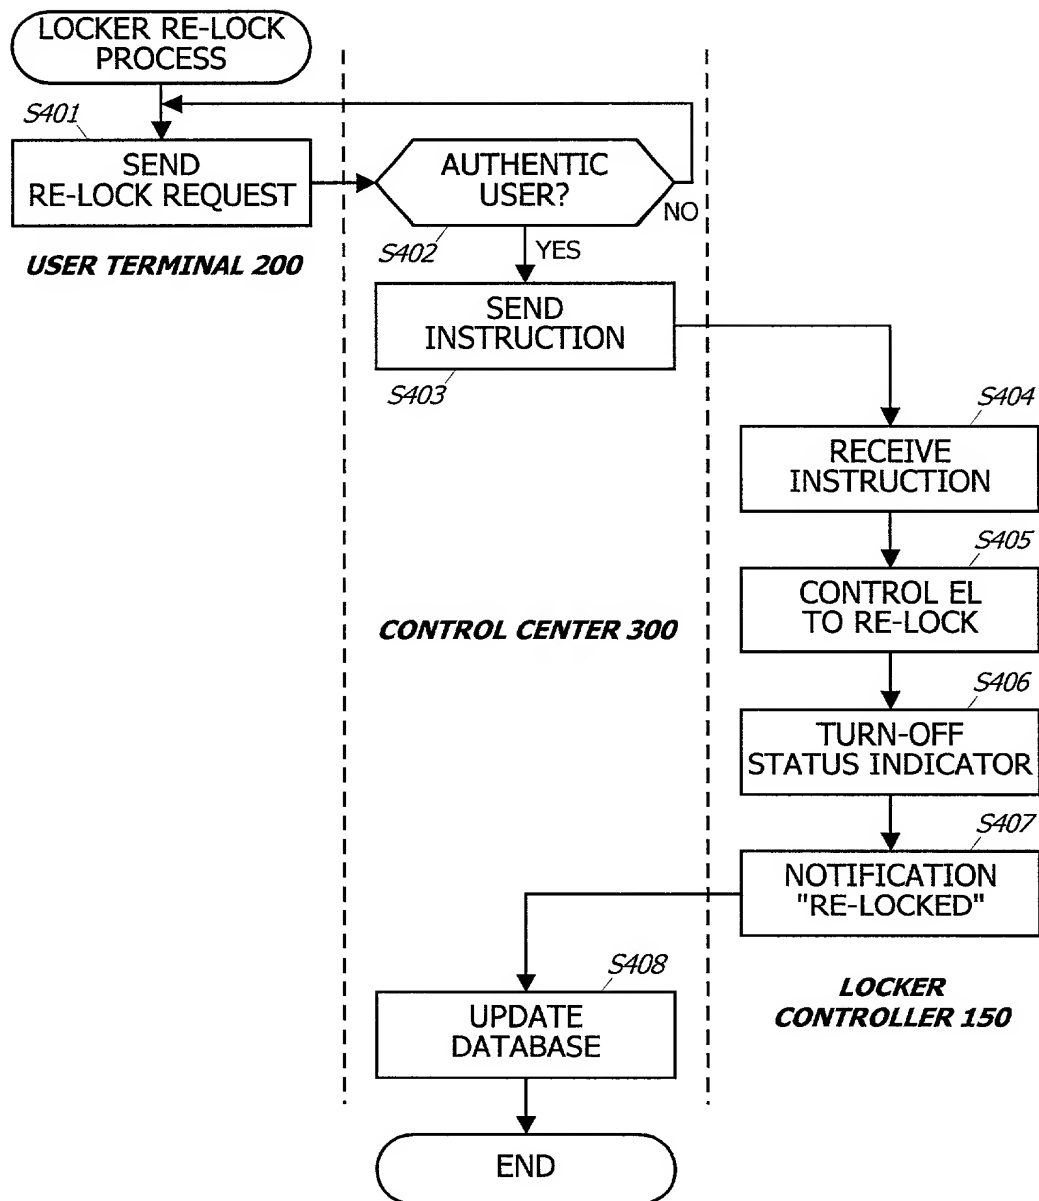 


FIG. 13

14 / 23

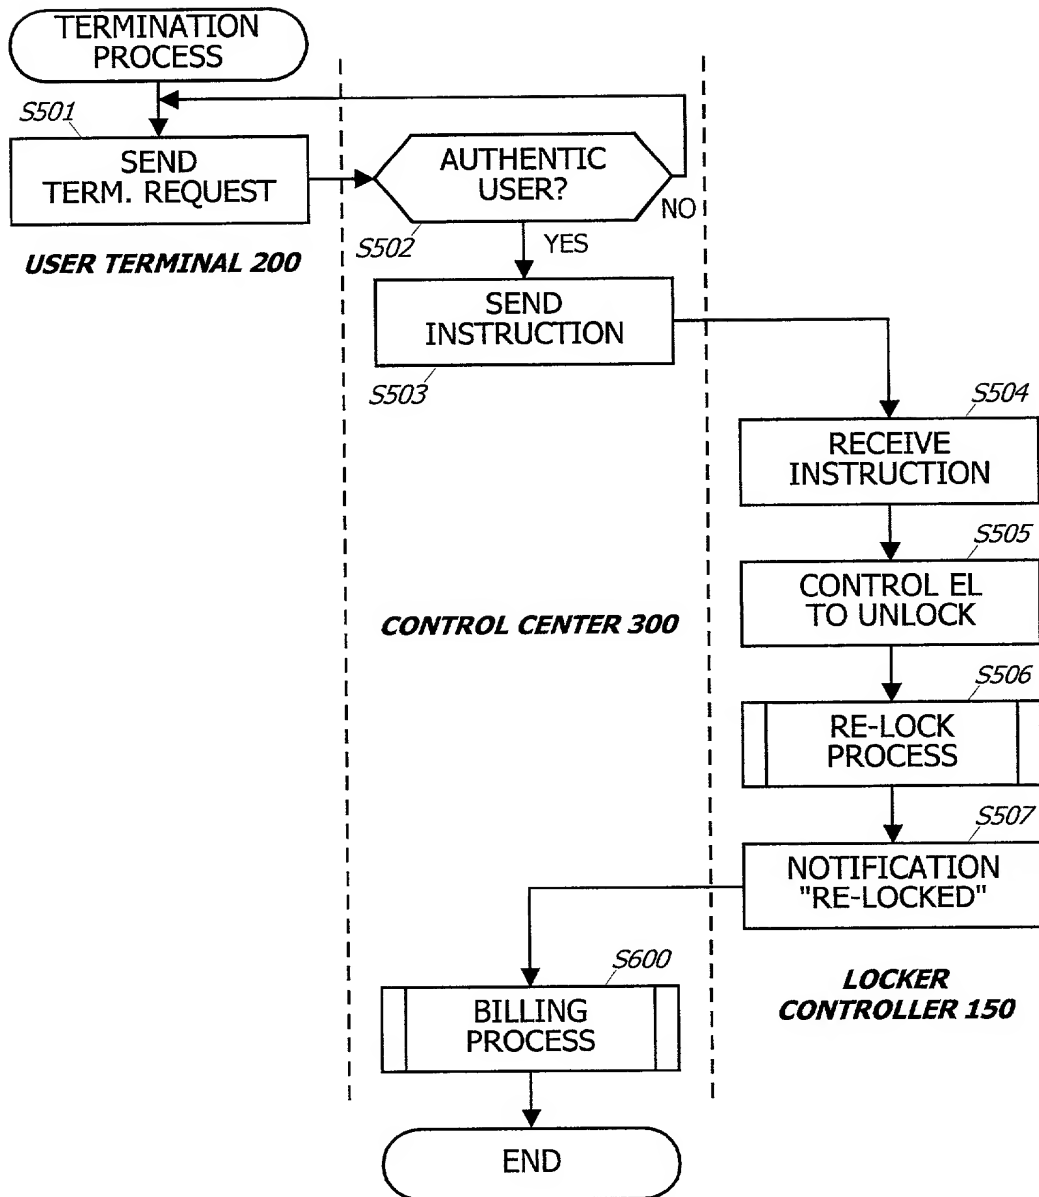 


FIG. 14

15 / 23

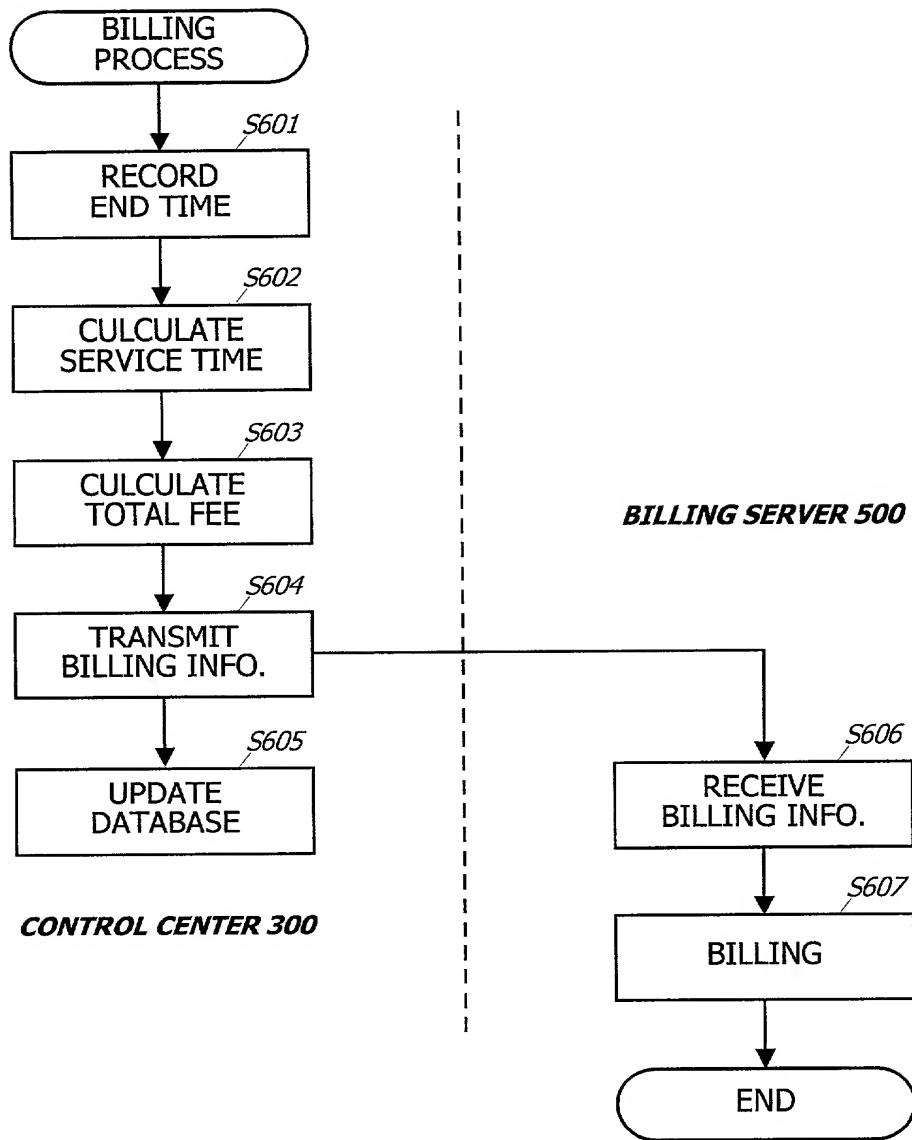 


FIG. 15

16 / 23

 
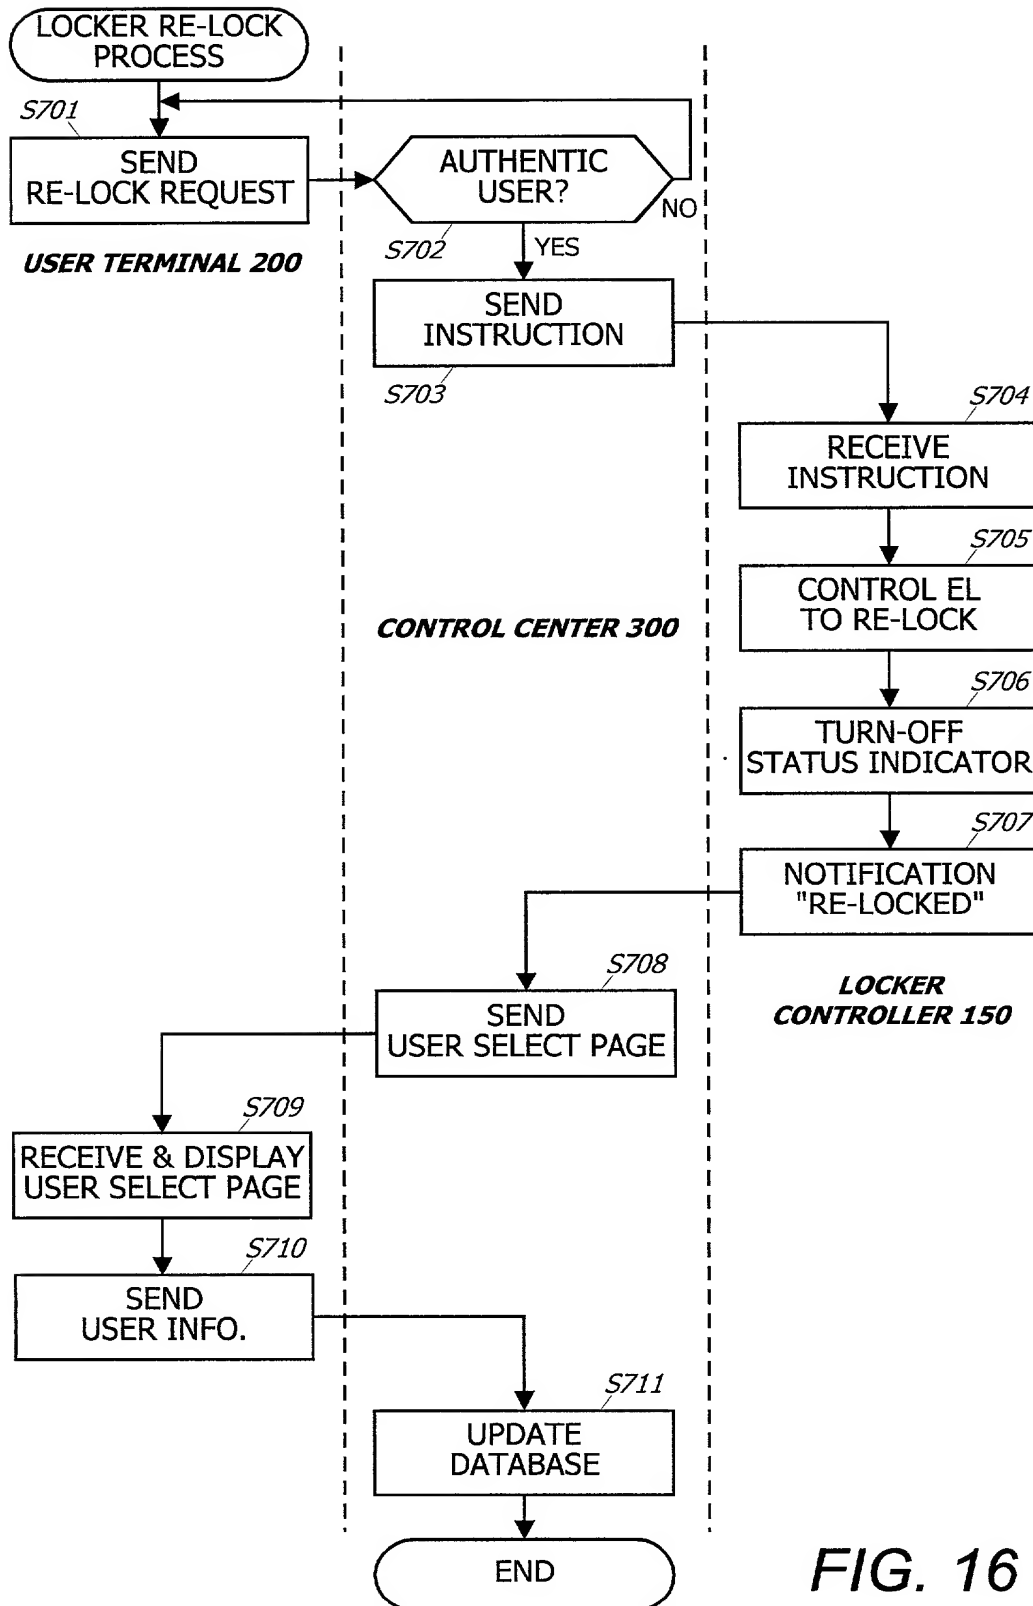 


FIG. 16

10023807 122101



17 / 23

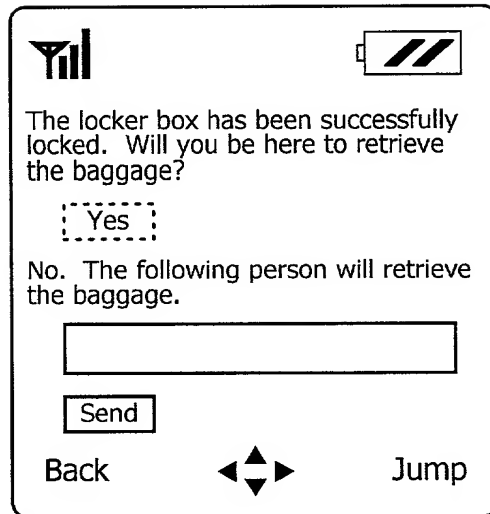

The screen displays a confirmation message: "The locker box has been successfully locked. Will you be here to retrieve the baggage?". Below the message is a dashed box containing the word "Yes". Further down, it says "No. The following person will retrieve the baggage." followed by a rectangular input field. At the bottom left is a "Send" button. At the bottom center is a four-way directional pad. At the bottom right are the words "Back" and "Jump". In the top left corner of the screen is an antenna icon, and in the top right corner is a battery level indicator.

The locker box has been successfully locked. Will you be here to retrieve the baggage?

Yes

No. The following person will retrieve the baggage.

Send

Back      Jump

FIG. 17

18/23

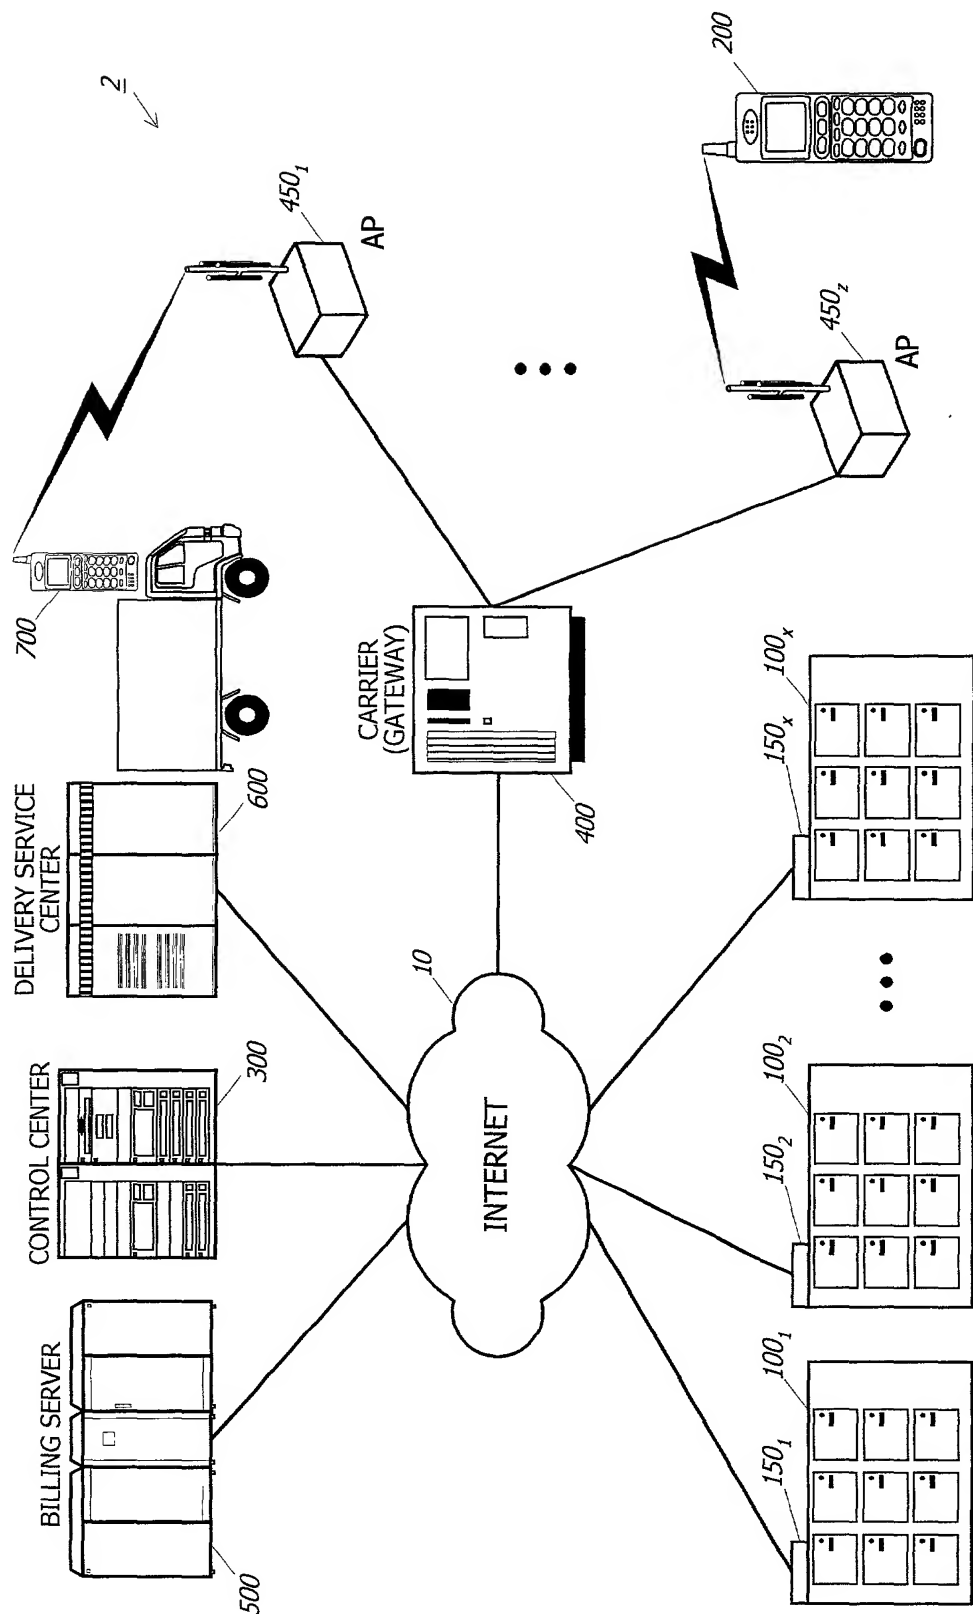 


FIG. 18

19 / 23

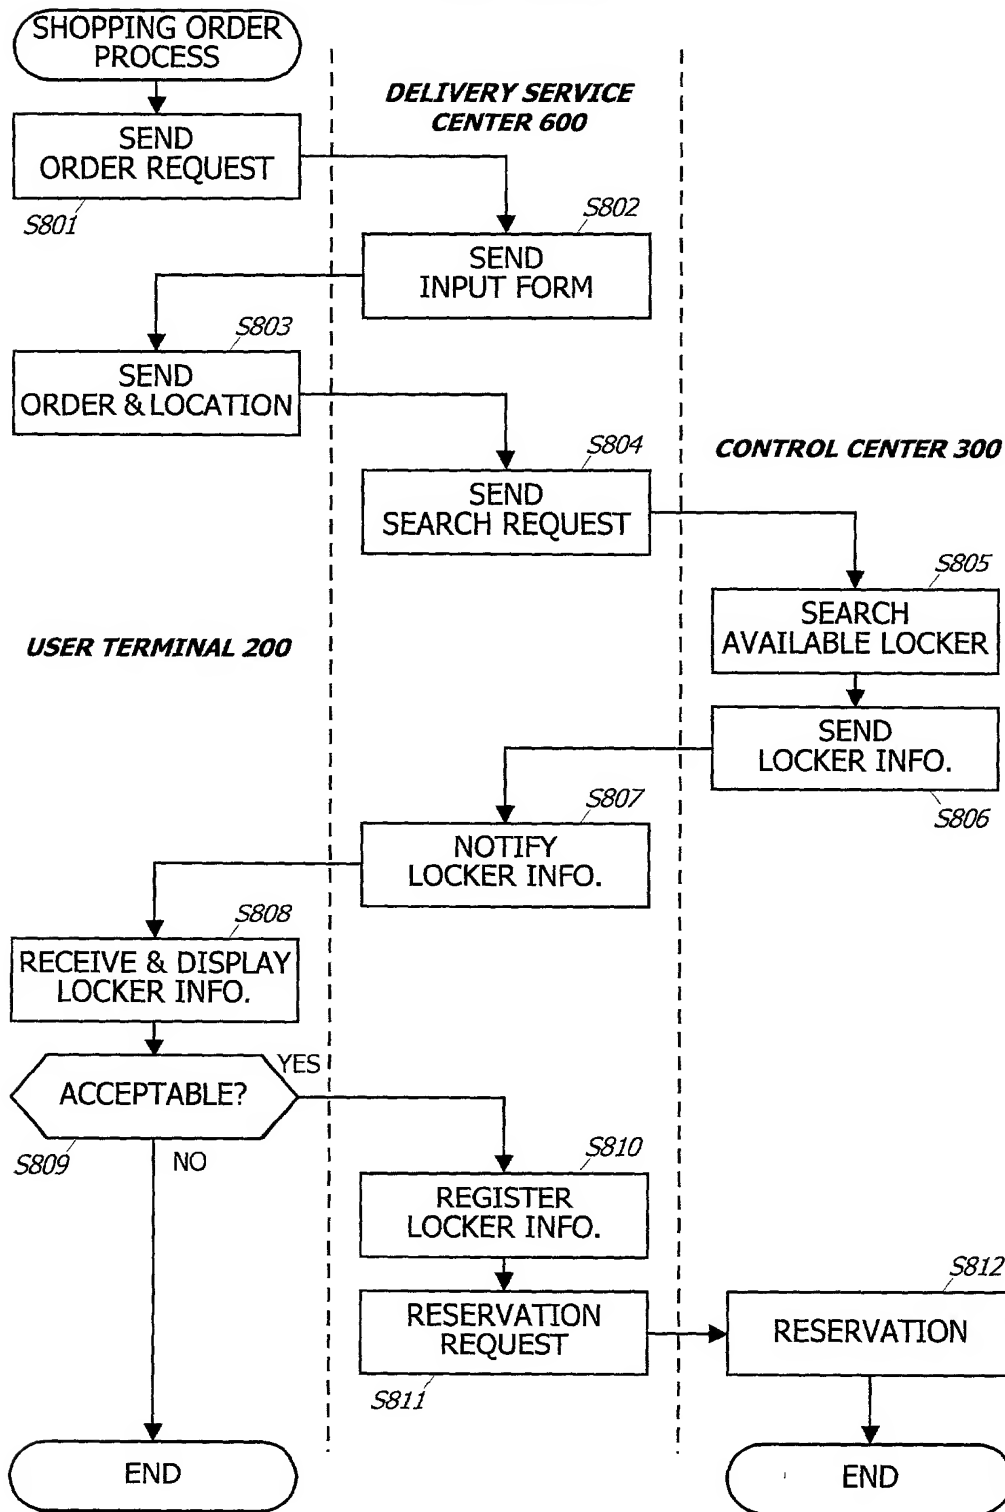 


FIG. 19

20 / 23

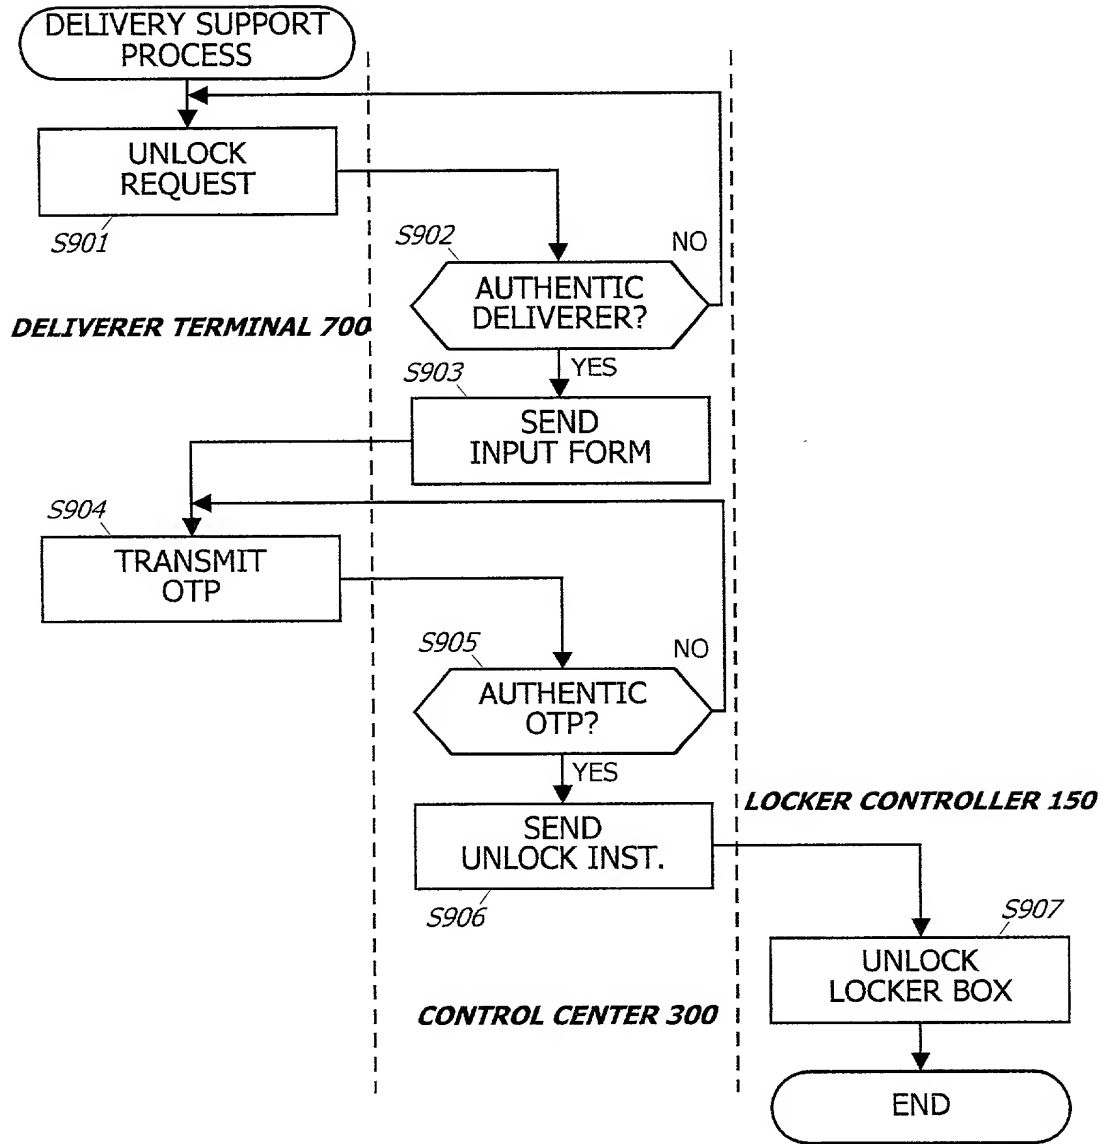 


FIG. 20

21/23

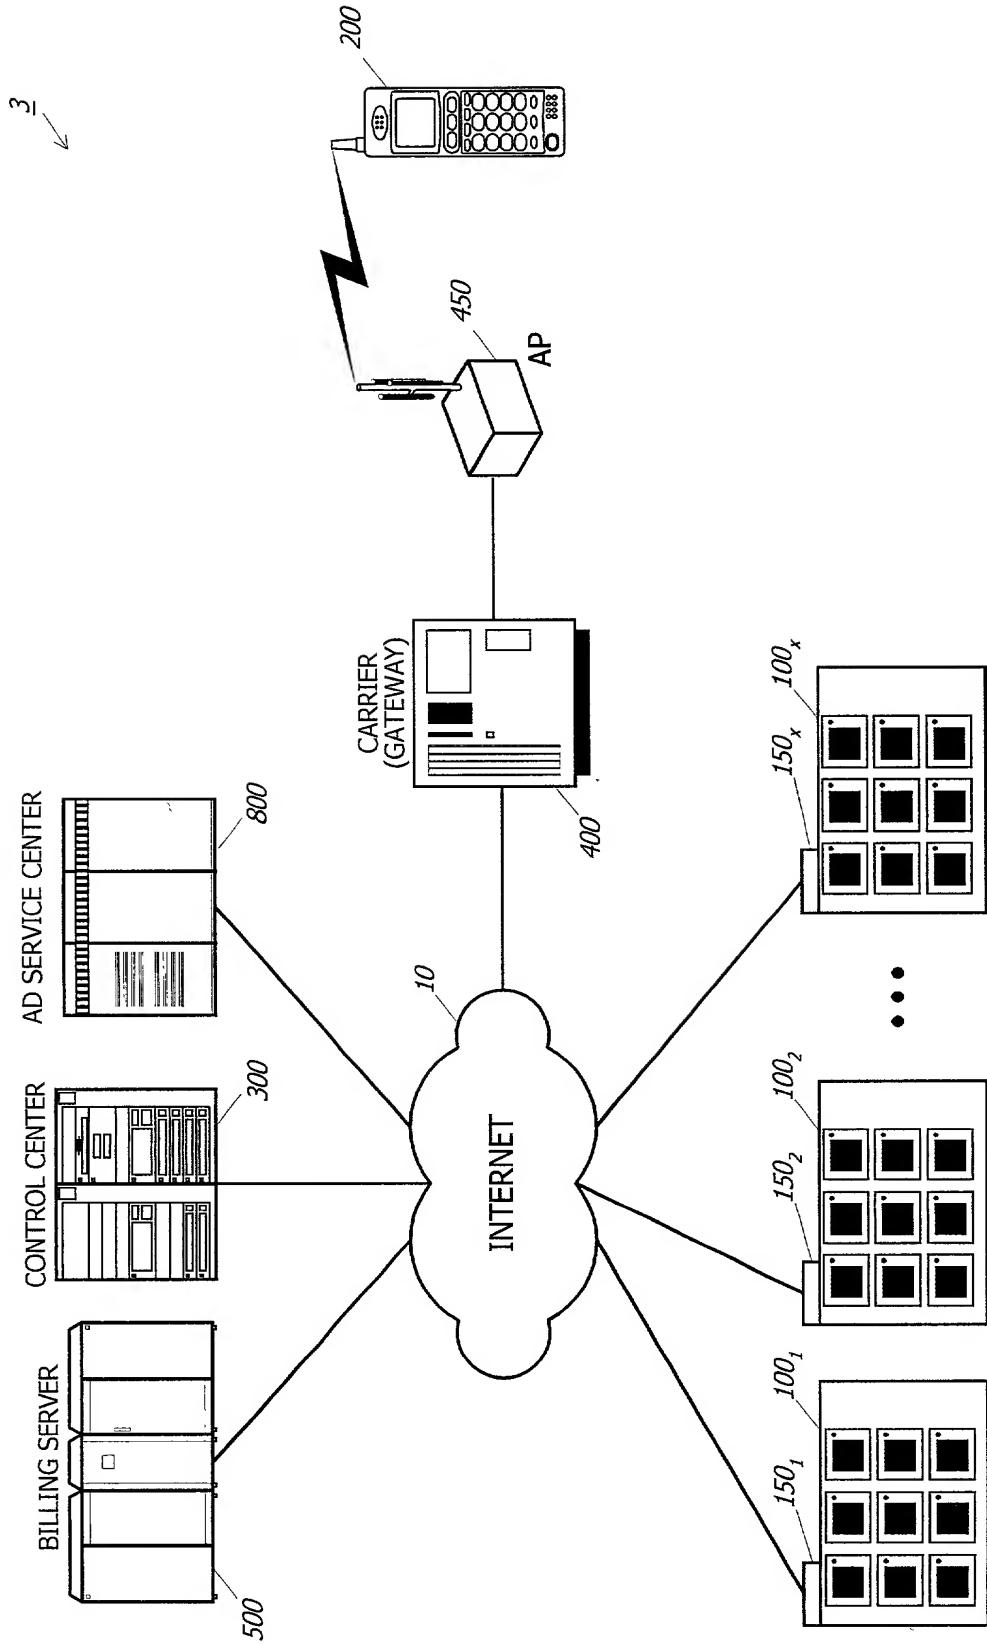 


FIG. 21

22 / 23

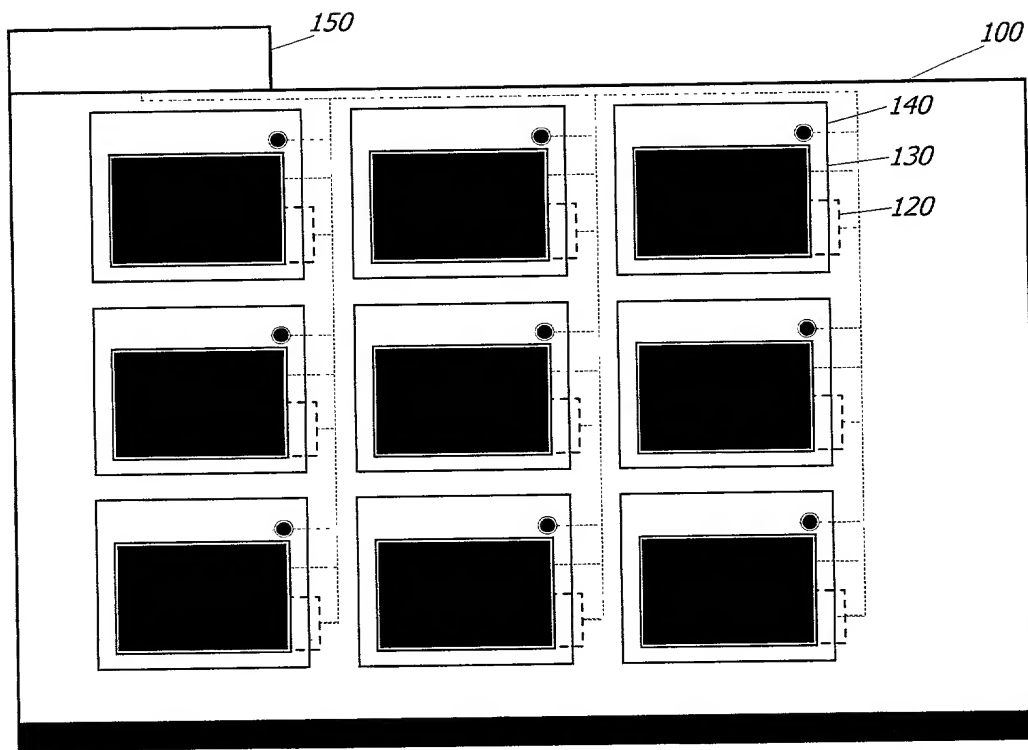 


FIG. 22

10023807 122101

23 / 23

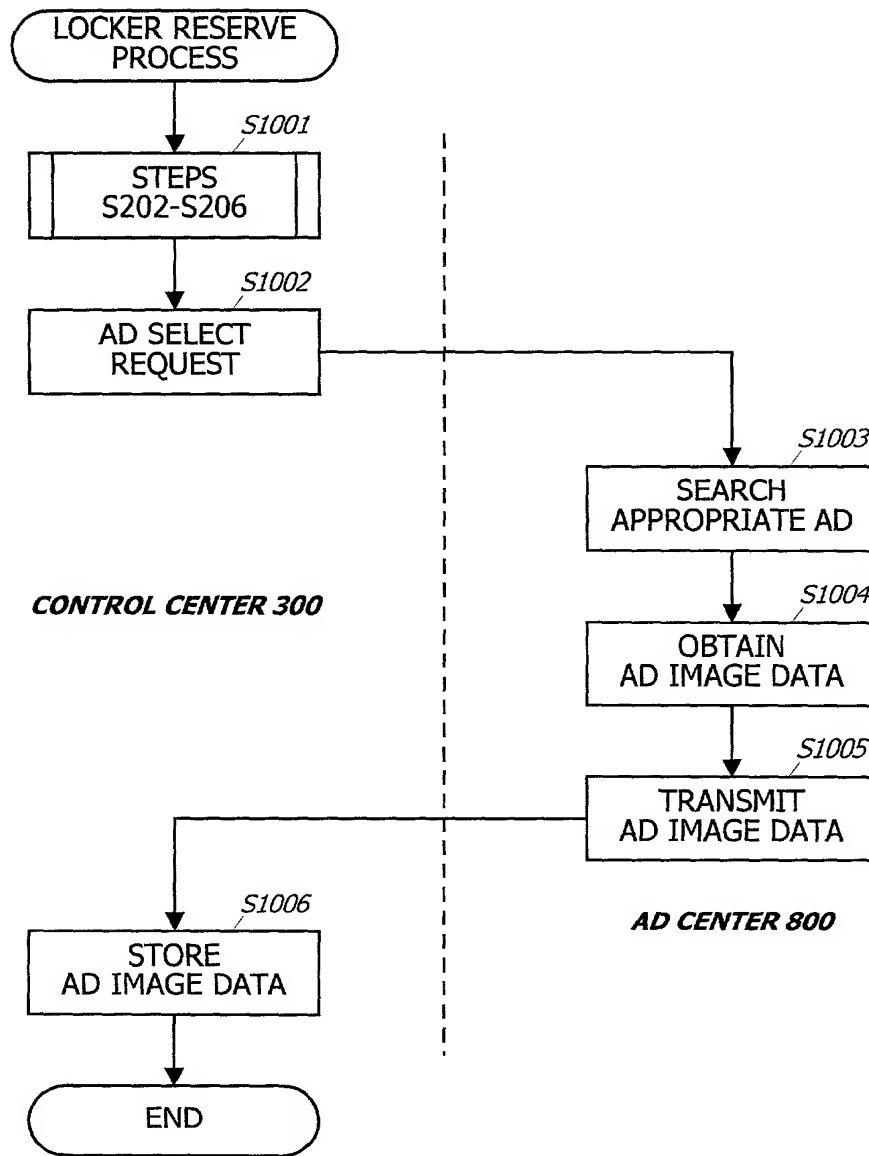 


FIG. 23